


# Remote Control Layout

## UEI S4000 Remote Control

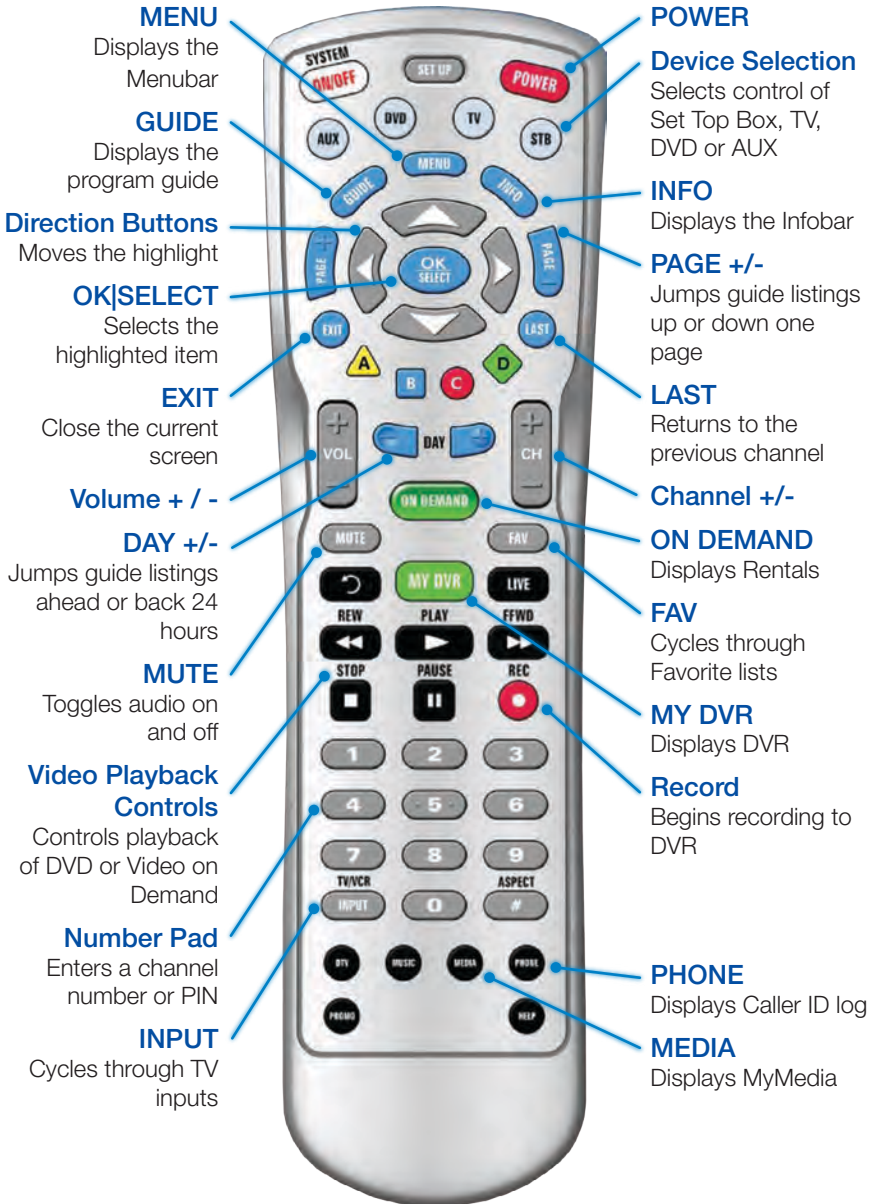

# Remote Control Layout

## Titan 2056 ISX Remote Control

### Device Selection

Send commands to AUX, DVD, AUD, TV or STB

### DVR Controls

Go back, bring up DVR list, go to live TV

### MENU

Displays Menubar

### GUIDE

Displays Guide

### DAY - / +

View Guide a day forward or back

### Function Keys

For internal use

### VOL + / -

Adjust volume

### MUTE

Toggle audio on or off

### FAV

For future use

### Number Pad

Enter a channel number or PIN

### Keyboard

Display on-screen keyboard

### Hot Keys

For future use

### POWER

Turn a selected device on or off

### Playback Controls

Control playback of DVD, DVR or VOD

### REC

Begin DVR recording

### INFO

Display the Infobar

### EXIT

Exit the Menubar

### PAGE - / +

Jump Guide 1 page back or forward

### OK

Enter a choice you have made

### Arrow Buttons

Move the highlight

### CH +/-

Change the channel

### ON DEMAND

Brings up VOD Menu

### LAST

Return to previous channel

### Hot Keys

For future use

### CC

Toggle closed captions on and off



# 1 Remote Control Basics

## Turn Your Set Top Box or TV On or Off

---

The device selection buttons tell your remote whether you want to control your set top box or your television.

To turn your TV on or off, press the **TV** button then the **POWER** button.

To turn your set top box on or off, press the **STB** button and then the **POWER** button.

*Note: It is not necessary to turn your set top box off.*

*Note: Your remote control must have the remote code programmed in before it can send the correct signals for your TV. If the list of TV brand codes was not included in your installation pack, please contact customer service.*

If pressing **POWER** turned the wrong device on or off, press the **POWER** button again, press the appropriate device selection button (**AUDIO**, **VCR**, **TV** or **STB**) and press **POWER** once more.

## Change Channels

---

The **CH+/-** button will change channels up or down one at a time.

The **Number Pad** can be used to directly enter a channel number.

**GUIDE** will display Guide so you can find a program you like. If the program is on now, you tune to the channel showing it. If not, you can set a scheduled event to remind you when it does come on. If your set top box supports recording, you can schedule a recording for the program.

For more information on Guide, see section **5 Guide**.

For more information on setting reminders, autotunes and recordings, see **Setting Reminders, Autotunes and Recordings** in section **5 Guide**.

## Adjust Volume

---

The **VOL+/-** button will adjust the volume gradually.

The **MUTE** button will toggle the sound on and off.

## System Buttons

---

There are a number of buttons on your remote that display different features of your service.

**MENU** displays the Menubar when in cable [STB] mode, and in [TV] mode

# 1 Remote Control Basics

you will see your TV's menu. The Menubar provides quick access to every feature supported by your service.

For more information about the Menubar, see section **4 Menubar**.

**INFO** displays the Infobar, a feature that lets you see information on what you're watching, what's coming on next, and what's on other channels.

For more information on the Infobar, see section **3 Infobar**.

**EXIT** causes your set top box to exit whatever screen you are seeing and return you to normal TV viewing. If you ever get lost on a screen, it is always safe to press **EXIT** and then start over.