



Introducing Controls

Note: Controls must first be set up in Settings before the Parental Controls on/off button will appear on the Menubar.

Controls let you turn on and off all parental controls for your service. With Parental Controls on, the kids can watch TV without you constantly worrying they may see something inappropriate. With Controls off, adults can watch their programs without repeatedly entering a password.

When Controls are on, titles of programs that exceed your parental control settings will not be shown. Once Controls are turned off, all program titles will be shown.

Go To Controls

Press **MENU** and highlight **Parental Controls**.

Enable/Disable Controls



The Menu lets you know if controls are on or off.


If parental controls are in effect, the Parental Controls button will say On.

If parental controls have been turned off, the Parental Controls button will say Off.



9 Controls


Disable Controls

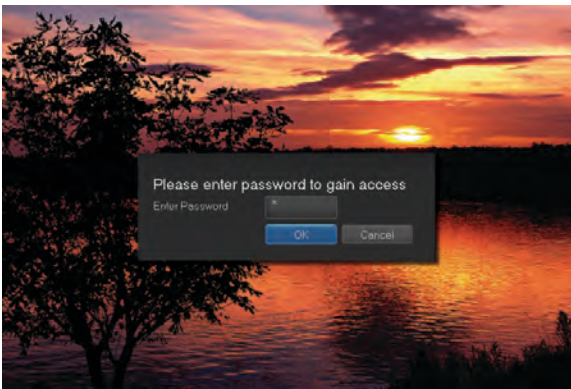

Highlight the **Controls** icon and Press **OK** to bring up the password screen. Use the **Number Pad** to enter your parental controls password. Then highlight **OK** and press **OK**.

When you disable controls, they will remain that way until you turn them back

on, or the Parental Controls Time Out is reached. The time out is the maximum period of time for which Parental Controls will be disabled.

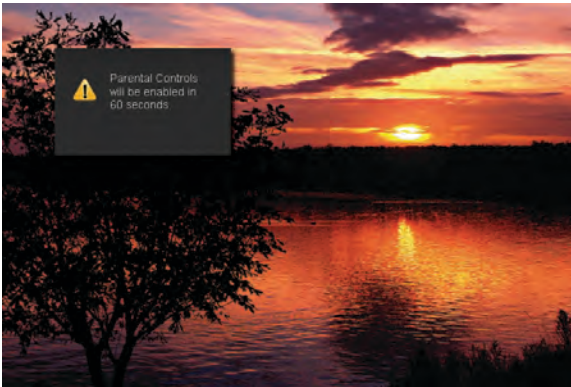

At the end of the Parental Controls Time Out, the system will automatically restore Parental Controls. You will see an alert on the screen just before parental controls are restored.

Enable Controls

Press **MENU** and highlight **Controls**, then press **OK**. Controls are now in effect.

For more information on creating parental controls and parental control settings, see section **10 Settings**.