



# 6 Rentals

## Introducing Rentals and VOD (Video on Demand)

Rentals provides access to VOD (Video on Demand) movies and programs. It's like renting from the local video rental store, only better. You can choose from the most recent movies and older favorites, along with favorite TV shows, music videos and local programming.

Unlike pay per view which only allows you to watch the program once at the scheduled time, VOD allows you to determine what and when you want to watch, and how often during the rental period. You can even pause, rewind or fast forward just like a videotape or DVD. Rental prices are comparable to prices at your local video store, and some programs may even be free!

VOD Rentals are the ultimate in convenience and entertainment in your home! No more hassles with video rental stores.

## Go To Rentals

Press **MENU**, highlight **Rentals** and press **OK**.

## Browse Rentals

VOD Rentals are grouped into categories and sub-categories to make finding what you want very easy.



## Step 1: Pick A Category

The bottom left of your screen lists the main Rental categories.

Highlight a main category and press **OK**.

# 6 Rentals




## Step 2: Browse The Rentals

When you choose a category, a list of available VOD Rentals for that category are shown to the right.

Highlighting a VOD Rental will list information for that Rental in the upper right portion of the screen.

At any time during this process, you can press the **Left Arrow** key to return to a previous set of categories.

## Rent A VOD Rental

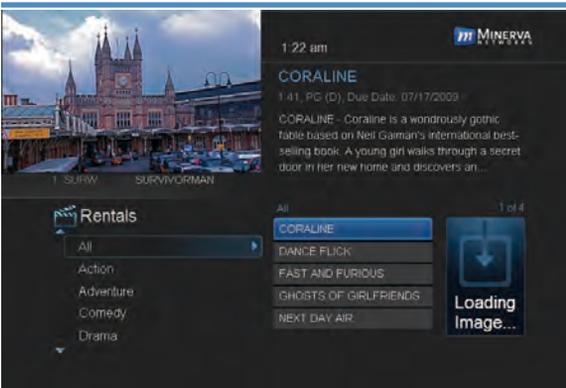


## Step 1: Pick A Rental


Follow Steps 1-2 for "Browse Rentals" to find a VOD Rental in which you are interested. Press **OK**.



# 6 Rentals

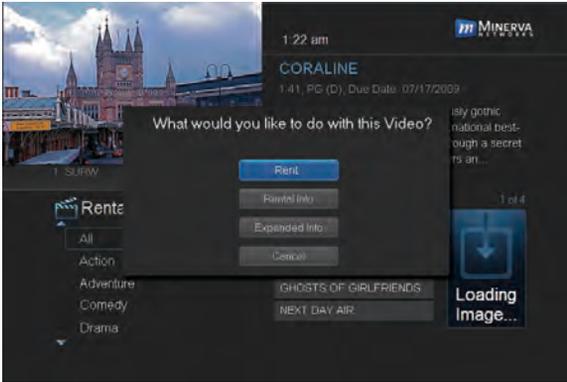

**Step 2: Rent**  
Highlight **Rent** and press **OK**.

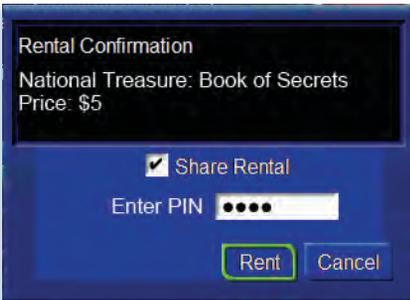

**Step 3: Confirm Your Rental**

The confirmation screen appears.

If you want other users to be able to watch this VOD Rental, highlight the **Share Rental** check box and press **OK**.

Now highlight the text box next to **Enter PIN** and use the **Number Pad** to enter your PIN, then highlight

**Rent** and press **OK** to confirm your VOD Rental.

## Watch Your VOD Rental


You can play your VOD Rental from Rentals or from My Library.

**Note:** For information on the My Library, see section **8 My Library**.



**Step 1: Pick Your Rental**

Highlight your VOD Rental and press **OK**.

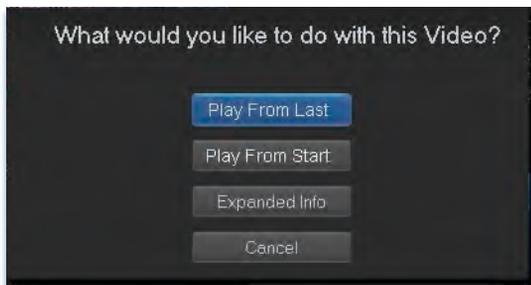

**Step 2: Play Your Rental**  
Highlight **Play From Start** and press **OK** to start play at the beginning of the program.

If you have already watched part of the program and want to pick up where you left off, highlight **Play From Last** and press **OK**.

### Controlling Rental Playback

While watching a VOD Rental, you can use the Playback Control buttons to pause, rewind, fast forward or stop playback.

 Press **PAUSE** to halt playback at the current point.

 Press **REWIND** or **FAST FWD** to reverse or advance playback from the current point.

 Press **PLAY** to resume watching at normal speed.

 Press **STOP** to exit playback of the program.

### The Slider



Any time you press one of the Playback Control buttons while watching a previously recorded program, the DVR playback controller is displayed.

The box to the left indicates the playback function in use.

The bar in the middle gives a visual representation of where you are in the recording. The filled-in portion of the progress bar indicates how much of the recording has been played.